



PRESS ASSISTANCE

for positioning of Wafers in our Wafer Holder Plus




LOADING




put the selector switch upstairs (pressure switchmode)

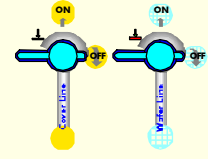



put the blue valve switch into the shown position

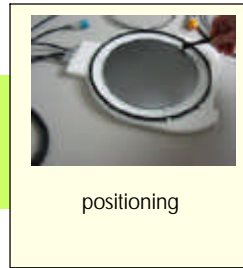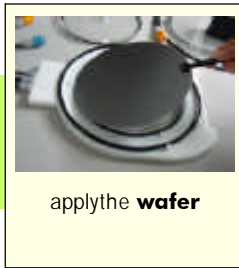
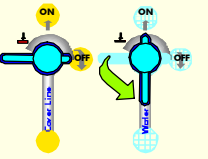
put the **wafer** valve into the shown position, the wafer sucked on

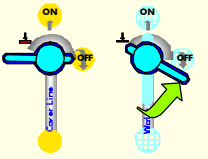

put the **wafer** valve into the shown position when the wafer is fixed

put the **cover** valve into the shown position,

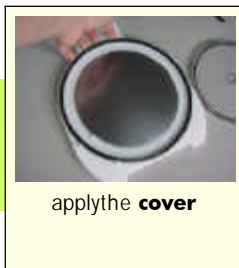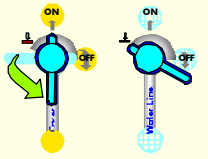put the wafer valve into the shown position, the **Wafer Holder** is ready for operation

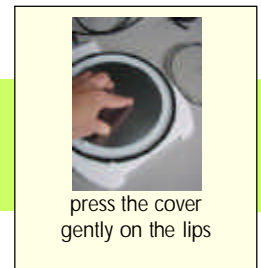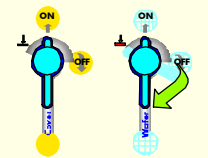


WAFER HOLDER PLUS

VACUUM-TOOL

unloading of Wafers in our Wafer Holder Plus




UNLOADING

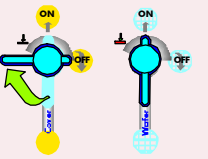

put the **cover** valve into the shown position,



the vacuum tool can also be used with a self-contained vacuum supply

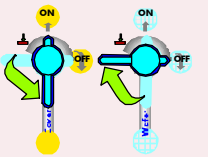

put the **cover** and **wafer** valve into the shown position, the wafer is ready to be taken off

